

ASSEMBLY INSTRUCTIONS FOR YOUR MINI "C" ARM FLOOR LAMP

IMPORTANT SAFETY INSTRUCTIONS

- *This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock. *This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- *Never use with an extension cord unless the plug can be fully inserted.
- *DO NOT ALTER THE PLUG.
- *Turn the power off (remove electrical plug from outlet) before replacing light bulb, making sure the bulb has cooled.
- *Do not subject the lamp to any shock while lit as shattering of bulb may result.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect the electricity until lamp is fully assembled.

1. Remove all parts from carton. Do not throw away any parts.
2. Place the lamp base on a soft (carpeted), level surface.
3. Use wrench (E) to unthread and remove screws (C) and washers (A) from the bottom of column (B).
4. Align column (B) with the back of base (D).
5. Slip washers (A) over screws (C). Guide screws and washers into the threaded holes in the bottom of base (D) and into column (B).
6. Tighten screws (C) with wrench (E).
7. Remove finial (F) from harp (H).
8. Squeeze harp (H) inward and place into the opening of saddle (I).
9. Place shade (G) onto harp (H). Place diffuser (J) on top of shade (G).
10. Screw finial (F) onto harp (H) to secure the shade and diffuser to the lamp.
11. Insert one (1) 100W MAX. Type A, medium base bulb into the socket.
12. Remove protective plastic (G) from polarized plug (F). Insert polarized plug (F) into wall outlet.

* To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

